

NOverflo Series Float Valve

Installation and Maintenance

The Valve Includes

- Valve Unit (including filter and diaphragm)
- Float Rod (6" Brass)
- 2" Float (attached to brass rod with grommets)
- FNPT x FNPT Adapter

Valve Assembly

- Installation is as simple as attaching the brass rod with the grommets and float, into the valve internal float mechanism lever.

Valve Installation

- Prior to installation ensure the feed lines are flushed and free of debris.
- Make sure that you chose the correct adapter/fittings to match your feed line diameter (see above).
- The valve comes with a Male MNPT connection type, but a female FNPT x FNPT coupler is also included.
- You can slightly adjust the float water level by adjusting the float up and down the brass rod to the desired level.

Maintenance

If the valve is not operating properly:

- Check the valve rod adjustment to assure proper tank level is maintained.
- Check the small built-in filter located in the inlet stem of the valve.



Internal Float Lever
(screw in brass rod here)

